

Redundant Array of Independent Disks (RAID) on HP Compaq dc7700 and dx7300 Business PCs

Using Intel Matrix Storage Manager



Introduction	3
Mirroring and Parity	3
Disk Striping	3
Basics of RAID Technology	3
Definitions	3
Basic RAID Types	5
RAID 0 with two hard drives (Striped)	5
RAID 1 with two hard drives (Mirror)	7
RAID 5 with three hard drives	8
Intel Matrix Storage Technology	10
Configurations	11
Recommended configurations	11
HP Backup and Recovery interactions	12
Other supported configurations	12
Unsupported configurations	12
Configuring RAID on non-factory preinstalled configurations	13
Enabling RAID through F10 System BIOS	13
Configuring RAID Option ROM	14
Configuring RAID Volume using the Option ROM	15
Notes for operating system installation	17
Intel Matrix Storage Manager software installation	18
Console Software Installation	18
Using the Intel Matrix Storage Console interface	19
RAID migrations	20

Migration to RAID 1 from two non-RAID hard drives using Intel Matrix Storage Console . . .	20
Degradation	22
Migration to RAID 0 from two non-RAID hard drives using Intel Matrix Storage Console . . .	23
Migration to RAID 0 from three non-RAID hard drives using Intel Matrix Storage Console . . .	24
Migration to RAID 5 from three non-RAID hard drives using Intel Matrix Storage Console . . .	28
Migration to Matrix RAID 5 and RAID 0 from three non-RAID hard drives using Intel Matrix Storage Console	32
Migration to RAID Matrix Mode (0 + 1) from two non-RAID hard drives using Matrix Storage Console	41
Installation	41
Language support table	42

Introduction

RAID (Redundant Array of Independent Disks) is a category of hard drives that employ two or more drives in combination for fault tolerance and performance. Initially used with servers, desktop PCs are increasingly using RAID by adding a RAID controller and extra IDE or SCSI disks. Newer system boards often have RAID controllers.

RAID technology takes advantage of Serial Advanced Technology Attachment (SATA) and the integration of RAID into the Intel Q965/ICH8-D0 chipset. The HP Compaq dc7700 and dx7300 Business PC products are the first business desktops to incorporate RAID drive support through factory configurations. This white paper provides a basic overview of RAID technology, supported factory configurations of HP Compaq dc7700/dx7300 Business PCs, other supported RAID configurations, and basic instructions on how to migrate non-RAID to RAID configurations in the field.

Mirroring and Parity

Fault tolerance is achieved by mirroring or parity. Mirroring is 100% duplication of the data on two drives (RAID 1). Parity is used to calculate the data in two drives and store the results on a third drive (RAID 5). After a failed drive is replaced, the RAID controller automatically rebuilds the lost data from the other two drives. RAID systems may have a spare drive (hot spare) ready and waiting to be the replacement for a drive that fails.

Disk Striping

RAID improves performance by disk striping, which interleaves bytes or groups of bytes across multiple drives, so more than one disk is reading and writing simultaneously.

Basics of RAID Technology

Definitions

Table 1 Basic RAID Definitions

ATA	Advanced Technology Attachment.
BIOS	Basic Input/Output System, also known as system ROM.
Chipset	Term used to define a collection of integrated components required to make a PC function.
HDD	Hard disk drive.
ICH	Intel Input/Output Controller Hub, inside this component resides the mass storage controller. ICH is part of the Intel Q965 chipset.
IDE	Integrated Drive Electronics.

INF	Information file (.inf) used by Microsoft operating systems that support the Plug & Play feature. When installing a driver, this file provides the operating system needed information about driver filenames, driver components, and supported hardware.
Migration	Term used to describe the movement of data from one configuration or usage model to another.
NCQ	Native Command Queuing.
Option ROM	Piece or software module inside the System BIOS which provides extended support for a particular piece of hardware. The RAID Option ROM provides boot support for RAID volumes as well as a user interface for managing and configuring the systems RAID volumes.
PCI	Peripheral Components Interface.
PCIe	PCI express. A serial version of PCI.
PnP	Plug and Play.
RAID	Redundant Array of Independent Disks.
ROM	Read Only Memory.
SATA	Serial ATA.
Strip	Set of data on a single hard drive in a RAID volume.
Stripe	Group of all strips going horizontally across all the hard drive members of a RAID volume.

Table 2 RAID Drives

Mode	Purpose	Minimal HDD Required
RAID 0	Striped for Performance.	2
RAID 1	Mirrored for Protection.	2
RAID 5	Parity for Accuracy.	3
RAID 0 + 1	Mirrored and Striped.	4*
Intel's Matrix Technology	4 logical drives on 2 physical disks, to emulate RAID 0 and 1.	2

* Not supported on HP Compaq dc7700 and dx7300 Business PCs.

NOTES: The following notes are important for RAID configuration:

- RAID 1 is the only RAID configuration that HP Compaq dc7700 and dx7300 Business PC products offer as factory configurations.
- The preconfigured systems:
 - Are complete RAID systems.
 - Have both drives installed.
 - Have the necessary Option ROM configuration.
 - Are preloaded and preinstalled with all required Intel software.
 - Include a preinstalled operating system that is mirrored mode out of the box.

Basic RAID Types

This section provides a brief explanation of the supported RAID configurations for HP Compaq dc7700 and dx7300 Business PCs.

RAID 0 with two hard drives (Striped)

Even though HP supports RAID 0, it is not the recommended configuration for business PC users. Lack of redundancy causes less than half the reliability of a single hard drive system since the Mean Time Between Failure (MTBF) of RAID 0 is equal to the MTBF of an individual drive, divided by the number of drives.


Table 3 RAID 0 with two hard drives (Striped)

First Disk	Second Disk
Data Segment 1	Data Segment 2
Data Segment 3	Data Segment 4
Data Segment 5	Data Segment 6
Data Segment 7	Data Segment 8
Data Segment 9	Data Segment 10
Data Segment 11	Data Segment 12
Data Segment 13	Data Segment 14
Data Segment 15	Data Segment 16

In the previous table, each “Data Segment n” represents a group of data, known as a strip. In this case, each row represents a stripe. RAID 0 represented in the table above shows how information is segmented, made into chunks or strips, and stored across the stripes of the hard drive members of this RAID volume.

To better illustrate the concept of RAID 0 and striping, the following graphic shows how a sequence of data “ABCD...” is stored in a RAID 0 mode. In this example, each letter represents a segment or strip. The graphic shows how the various pieces of the information go to different hard drives. If any segment of RAID 0 fails, all information from all members is lost.


Figure 1 Performance - RAID 0 with two hard drives

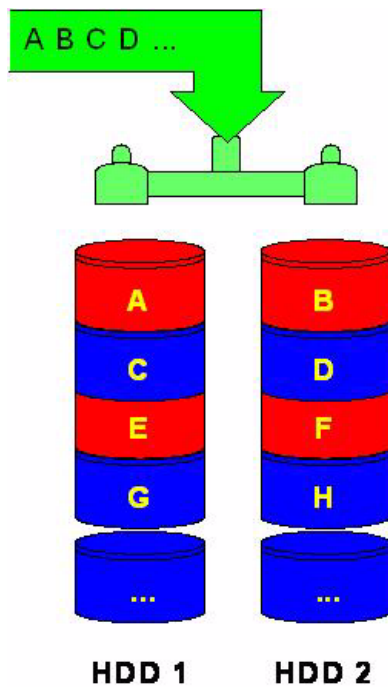

At a higher reliability cost with faster performance, HP Compaq dc7700 Business PC Convertible Mini-tower and dx7300 Microtower also allow for RAID 0 with three hard drives. RAID 0 with two or three hard drives is a supported configuration.

RAID 0 with three hard drives is shown in the following figure:

Figure 2 RAID 0 - Three hard drives

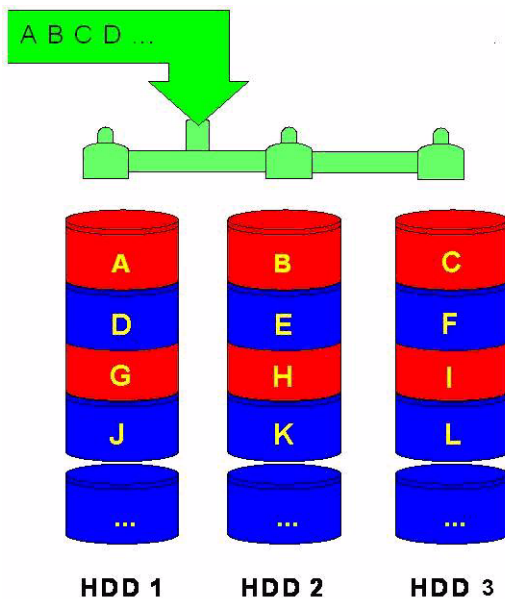

RAID 1 with two hard drives (Mirror)

Because it is a very cost-effective way to increase system storage reliability and a great value proposition, RAID 1 is the only RAID configuration that HP preconfigures for HP Compaq dc7700 and dx7300 Business PCs. RAID 1 provides high availability with minimal performance impact, as well as greater reliability compared to a single hard drive configuration.

RAID 1 has redundancy and hence is a true RAID. It more than doubles reliability because the MTBF of RAID 1 is equal to the MTBF of an individual drive multiplied by the number of drives (2). In other words, the probability of one hard drive failure on a given day is the square root of that same probability. Hypothetically, if the chances that a single hard drive fails is 1:2000, with RAID 1 the chance that both of your hard drives fail is 1:4,000,000.

Mirroring, segmentation, and striping have no real meaning in RAID 1. In the table and graphic, the data is arranged in rows for representation of different pieces of data.


Table 4 RAID 1 with two hard drives (Mirror)

First Disk	Second Disk
Data Segment 1	Data Segment 1
Data Segment 2	Data Segment 2
Data Segment 3	Data Segment 3
Data Segment 4	Data Segment 4
Data Segment 5	Data Segment 5
Data Segment 6	Data Segment 6
Data Segment 7	Data Segment 7
Data Segment 8	Data Segment 8

In the previous table, each “Data Segment n” represents a group of data, known as a strip. In this case, each row represents a stripe. This table shows how information is duplicated in both hard drives. The size of the strips is mostly irrelevant and not a configurable option.

To better illustrate the concept of RAID 1 and mirroring, the following figure shows how a sequence of data “ABCD...” is stored in a RAID 1 volume. In this example, each letter represents a data segment. The graphic shows how the various pieces are replicated for both of the hard drives; hence, if any one member of the RAID 1 volume fails, the information is kept in the surviving members. After a hard drive failure, the user interface sends a notification so the failed hard drive can be replaced. No user information is lost in this scenario.

Figure 3 Reliability: RAID 1 - Mirroring

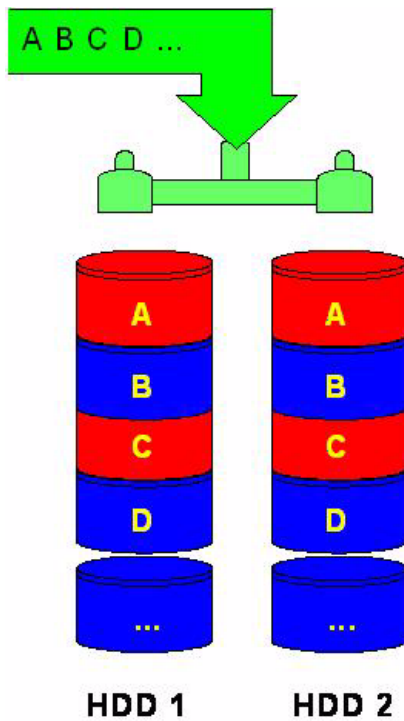

RAID 5 with three hard drives

RAID 5 has been used in servers for many years and is one of the most common types of RAID. RAID 5 uses striping with parity data in distributed blocks across all member disks. Therefore, the mass storage controller can simultaneously write new information to two hard drives and parity information to the third hard drive, so if one hard drive fails, the RAID controller can rebuild all the information after the volume degradation occurred. Hence, RAID 5 with three hard drives has similar performance to RAID 0 with two hard drives, and the reliability of RAID 1 with a minimum of three hard drives.


Table 5 RAID 5 with 3 hard drives (Parity)

First Disk	Second Disk	Third Disk
Data Segment 1	Data Segment 2	Parity for 1 and 2
Data Segment 3	Parity for 3 and 4	Data Segment 4
Parity for 5 and 6	Data Segment 5	Data Segment 6
Data Segment 7	Data Segment 8	Parity for 7 and 8
Data Segment 9	Parity for 9 and 10	Data Segment 10
Parity for 11 and 12	Data Segment 11	Data Segment 12
Data Segment 13	Data Segment 14	Parity for 13 and 14
Data Segment 15	Parity for 15 and 16	Data Segment 16
Parity for 17 and 18	Data Segment 17	Data Segment 18

In the previous table, each "Data Segment x" represents a strip. A stripe is made with strip "Data Segment x", "Data Segment y" and strip "Parity for x and y." Notice that the strip "Parity for x and y" is used to store the required information to recreate the data if any one of the RAID volume members is compromised.

To better illustrate the concept of RAID 5 (parity based RAID), the following figure shows how a sequence of data "ABCD..." is stored in a RAID 5. In this example, each letter represents a segment or strip. The figure shows how the various pieces of the information go to different hard drives, hence if any one member of the RAID 5 fails, the information from all members is not lost.


Figure 4 RAID 5 with three hard drives

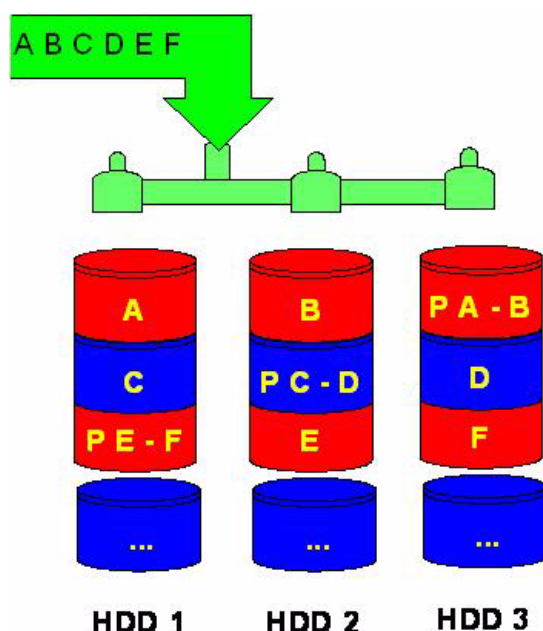

Intel Matrix Storage Technology


This technology provides protection against data loss from a hard drive failure and faster access to digital photo, video, and music files by supporting NCQ as well as RAID 0, 1, 5, and 10. Matrix RAID enables two RAID levels to be combined for data loss protection plus performance. Intel Matrix Storage Technology was previously known as Intel Application Accelerator 4.x and Intel Application Accelerator RAID Edition 3.x.

Figure 5 Matrix RAID combining reliability and performance with the same two hard drives

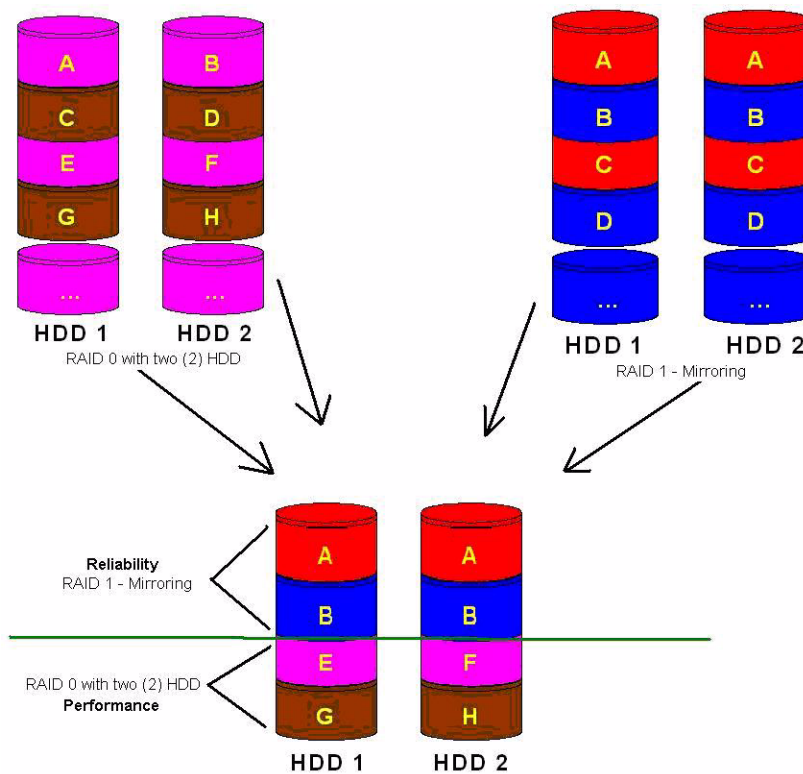

Using Intel Matrix Storage technology, you can configure the HP Compaq dc7700 Business PC Convertible Minitower or the HP Compaq dx7300 Business PC Microtower with two RAID volumes using three hard drives - a RAID 0 volume for ultimate performance, and a second volume as RAID 5 with reliability and performance improvements.

Figure 6 Matrix RAID combining reliability and performance with same three hard drives

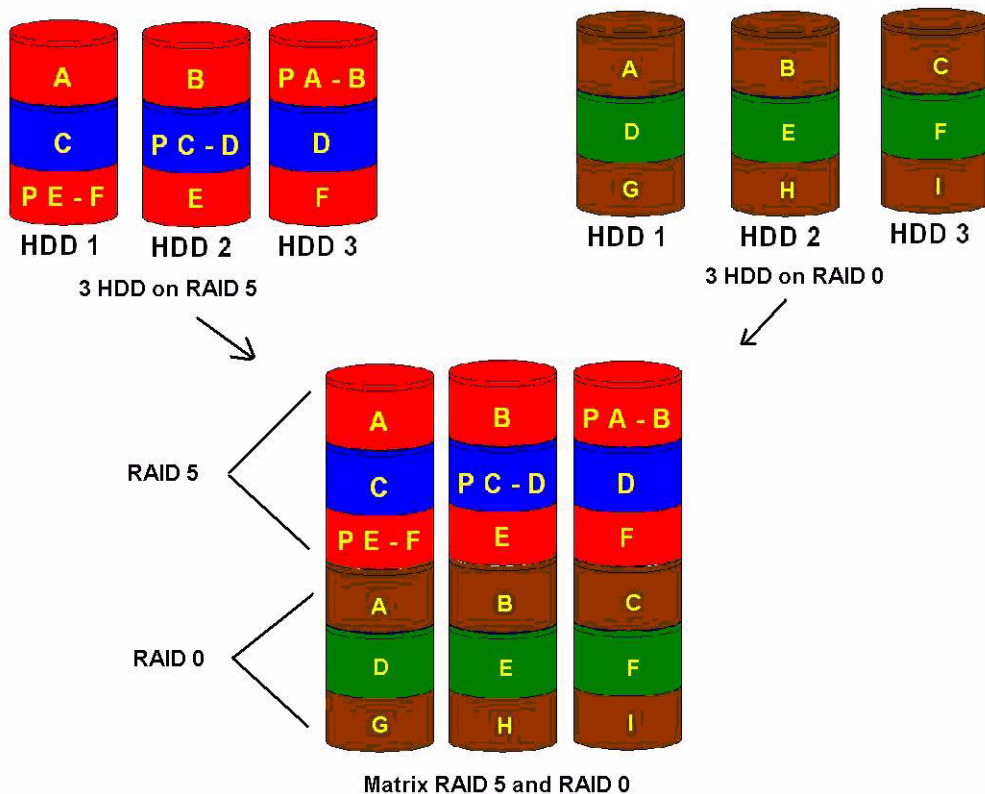

Configurations

Recommended configurations

HP recommends factory configurations of the preinstalled RAID offerings for the HP Compaq dc7700 and dx7300 Business PCs.

The preinstalled RAID offering is a RAID 1 volume of two identical SATA hard drives, and either two SATA 80GB/8MB cache or two SATA 160GB/8MB cache drives.

NOTE: When the HP Compaq dc7700 and dx7300 Business PC products launch, the only supported operating system is Microsoft Windows XP Professional Service Pack 2 (SP2). RAID Configurations are only supported with this operating system.

Hardware and firmware support is present to take advantage of the future Microsoft Vista operating system. Intel Matrix Storage Technology RAID software support for Microsoft Vista will be available at a later date.

HP Compaq dc7700 and dx7300 Business PCs are based on the Intel Q965/ICH8-DO RAID chipset, which is a combined hardware and software RAID solution. The Intel ICH8-DO SATA mass storage con-

troller allows all drives to operate in IDE or RAID SATA modes. Each mode of the controller means a different PCI controller, with different device ID, class code, and driver support.

NOTE: HP recommends and only supports Microsoft's IDE driver stack based on the ATAPI.SYS driver for HP Compaq Business PC products including all supported RAID configurations.

WARNING: The PCI Device ID of the mass storage controller changes after changing IDE mode. Changing the BIOS from IDE mode to RAID mode is the equivalent of connecting the hard drives to a new add-on RAID storage controller. The installed operating system on the hard drive is unaware of this new mass storage controller. If the operating system does not have the RAID drivers enumerated and PnP for the RAID controller, the operating system will fail to boot (blue screens) when Microsoft XP Professional (SP2) attempts to boot.

HP Backup and Recovery interactions

After enabling and configuring RAID, restore the system using backup CDs. After completing the restore, reinstall HP Backup and Recovery. These steps are necessary for the F11 restore to function properly.

HP also recommends keeping the default options in the RAID Option ROM and in the Windows RAID application. Options like "chunk" size for changing the size "stripe" size have more history in their defaults settings.

Additional technical information will be provided in the future for customers who want to add RAID software image deployment capabilities.

Other supported configurations

The HP Compaq dc7700 and dx7300 Business PC products support two other RAID configurations:

- Two hard drive configuration.
 - Two equal size/type SATA hard drive RAID configurations in RAID 0 or RAID 1 or Matrix Mode of RAID 0 and RAID 1.
 - Maximum of two SATA optical drives (on HP Compaq dc7700 Business PC Convertible Mini-tower or HP Compaq dx7300 Business PC Microtower).
- Three hard drive configuration (only on HP Compaq dc7700 Business PC Convertible Minitower or HP Compaq dx7300 Business PC Microtower).
 - Three equal size/type SATA hard drive RAID configurations in RAID 0 or RAID 5 or Matrix Mode of RAID and RAID 5.
 - Maximum of one SATA optical drives.

Unsupported configurations

The HP Compaq dc7700 and dx7300 Business Desktop PC products only support the best user experience and highest possible reliability. As a result, HP does not support the following combinations of RAID hard drives:

- Different sizes
- Different speeds (5400 rpm, 7200 rpm, etc)




- Old and new technologies (SATA 1.5 GB and SATA 3.0 GB)
- NCQ hard drives and non-NCQ drives.
- Different cache size
- RAID combinations of hard drives with any operating system other than Microsoft XP Pro (SP2) using Microsoft's IDE driver stack based on ATAPI.SYS

Configuring RAID on non-factory preinstalled configurations

The remaining sections of this white paper describe steps to set up supported RAID configurations where customers have not purchased factory preinstalled RAID configurations.

Enabling RAID through F10 System BIOS

1. Turn on or restart the computer by clicking **Start > Shut Down > Restart the Computer**.
2. Press **F10** as soon as the monitor light turns green.
If you do not press **F10** at the appropriate time, you must restart the computer, and then press **F10** again to access the utility.
3. Select your language from the list, and then press **Enter**.
4. Use the arrow keys to select **Storage**.
5. Use the down arrow key to select **Storage Options**, and then press **Enter**.

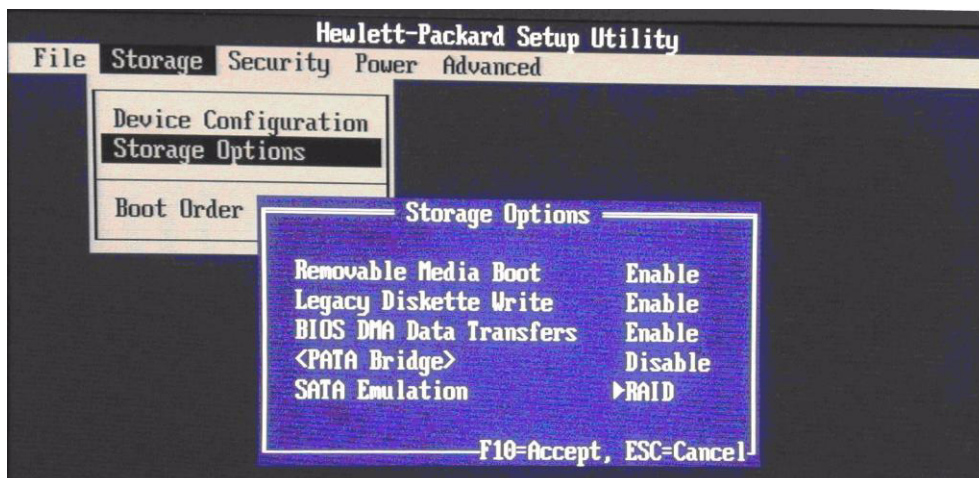

6. On the **Storage Options** menu, use the down arrow key to select **SATA Emulation**.
7. Press the right arrow key until **RAID** displays, and then press **Enter**.
8. To apply and save changes, select **File > Save Changes and Exit**.
 - If you do not want to apply your changes, select **Ignore Changes and Exit**.

- To reset to factory settings, select **Set Defaults and Exit**. This option restores the original factory defaults.

CAUTION: Do NOT turn the computer power off while the ROM is saving the F10 Computer Setup changes as the CMOS could become corrupted. Only turn the computer off after exiting the F10 Setup screen.

Configuring RAID Option ROM

You can only access Computer Setup at system startup. To access the Computer Setup Utilities menu and enable RAID:

1. Turn on or restart the computer by clicking **Start > Shut Down > Restart the Computer**.
2. Press **Ctrl + I** repeatedly as soon as the monitor light turns green to enter the RAID configuration utility. If you do not press **Ctrl + I** at the appropriate time, you must restart the computer, and then press **Ctrl + I** again to access the utility.

The Intel Matrix Storage Manager screen (RAID Option ROM) displays briefly during boot up. The RAID configuration utility is English only. To configure RAID in other languages, use the Windows-based RAID configuration utility.

```
Intel(R) Matrix Storage Manager option ROM v6.0.0.1017 ICH8R wRAID5
Copyright(C) 2003-06 Intel Corporation. All Rights Reserved.


RAID Volumes:
ID   Name           Level           Strip Size   Status   Bootable
0    VolRAID1       RAID1(Mirror)   N/A        40.0GB   Normal   Yes
1    VolRaid0       RAID0(Stripe)   128KB      69.1GB   Normal   Yes

Physical Disks:
Port Drive Model      Serial #           Size   Type/Status(Vol ID)
0      SAMSUNG HD080HJ/     S08EJ10L209082    74.5GB Member Disk(0,1)
1      ST3008110AS         3LR09EZH          74.5GB Member Disk(0,1)


Press <CTRL-I> to enter Configuration Utility..
```


Configuring RAID Volume using the Option ROM

1. Once you are in the Option ROM, if there are no previous RAID member hard drives, press **Ctrl + I** to enter the RAID configuration utility.

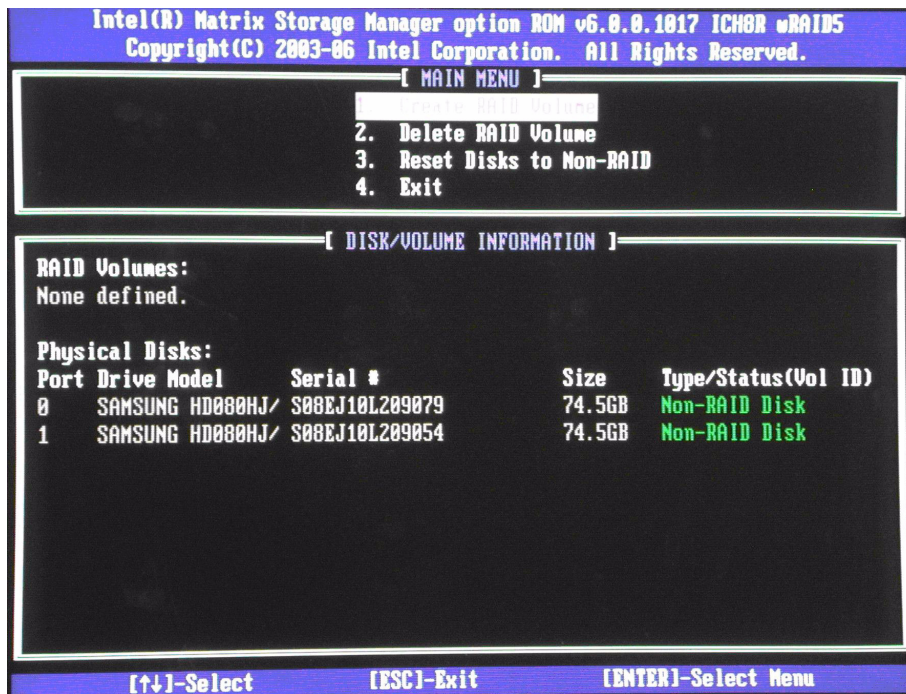


2. With **Create RAID Volume** selected, press **Enter** to access the Create Volume screen.

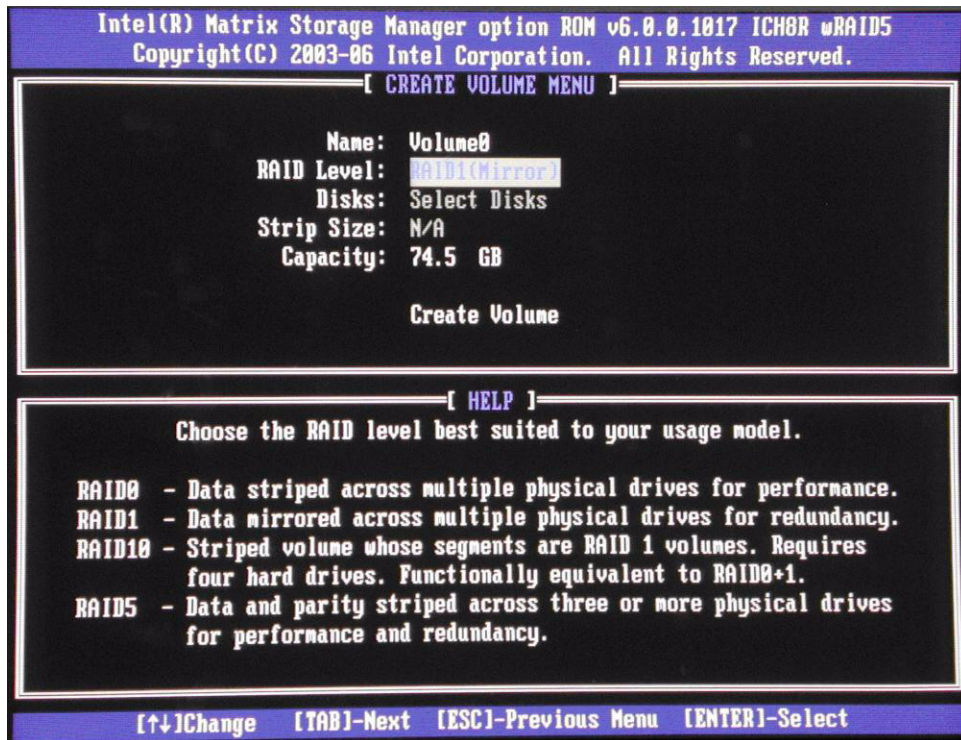

3. Select or enter the desired **RAID Level**. Use the information on the bottom half of the screen if necessary.

4. Use the arrow keys to scroll to **Create Volume**, and press **Enter**. The following screen appears.

CAUTION: All data on the selected disk will be deleted.

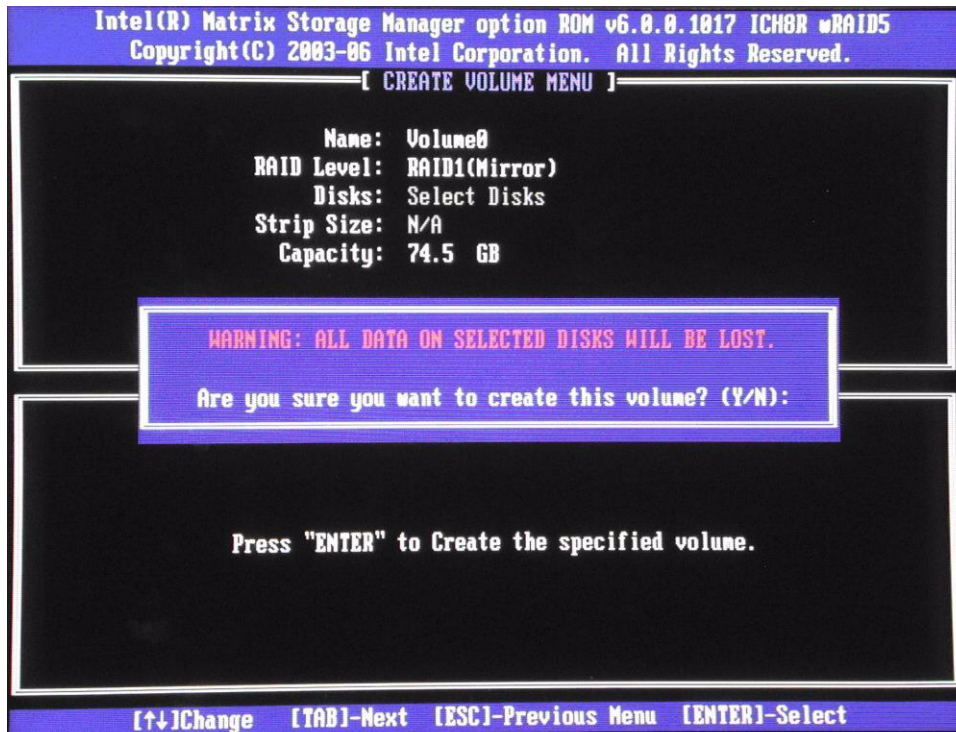

Notes for operating system installation

- After creating a RAID disk volume in the option ROM, you can install the operating system.
- HP provides a download for the required F6 disk for Windows XP CD installation.
- Customer-created images MUST account for the RAID controller.
- Failure to install and enumerate the RAID driver after enabling the RAID controller (with or without creating a volume) will result in a Windows boot failure (blue screen) for inaccessible boot device.

WARNING: The PCI Device ID of the mass storage controller changes after changing IDE mode. Changing the BIOS from IDE mode to RAID mode is the equivalent of connecting the hard drives to a new add-on RAID storage controller. The installed operating system on the hard drive is unaware of this new mass storage controller. If the drivers are not available, enumerated, and PnP for this new controller, the operating system blue screens in Microsoft XP.

Additional technical information will be provided in the future for customers who want to add RAID SW image deployment capabilities.


Intel Matrix Storage Manager software installation

This section of the paper focuses on how to configure RAID using Intel Matrix Storage Manager software. The configuration steps are for application usage and supported RAID migrations.

Console Software Installation


The Intel Matrix Storage Manager Software has been preloaded in all HP Compaq dc7700 and dx7300 Business desktops at "C:\COMPAQ\Intel MSM". To execute the software, run the setup.exe file. You can also get this software from the HP and Intel Web sites.

1. Select **Start > All Programs > Intel Matrix Storage Manager** icon.

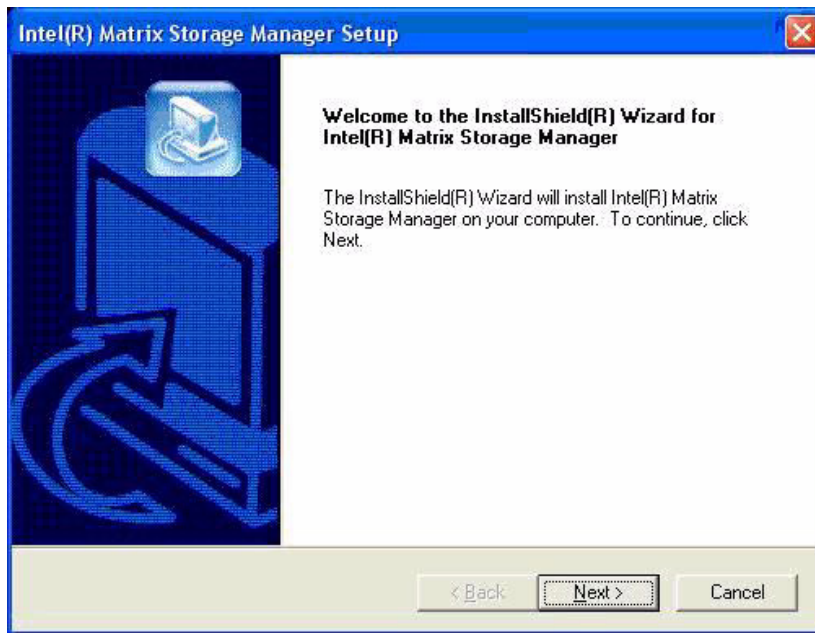

2. Click **Next**.
3. Read the driver agreement. If you agree, click **Next**.
4. Read the License Agreement. If you agree, click **Yes**.
5. Select or browse to a destination folder, and then click **Next**.

6. The Select Program Folder window suggests a program folder with **Intel Matrix Storage Manager** highlighted to add the program icons.

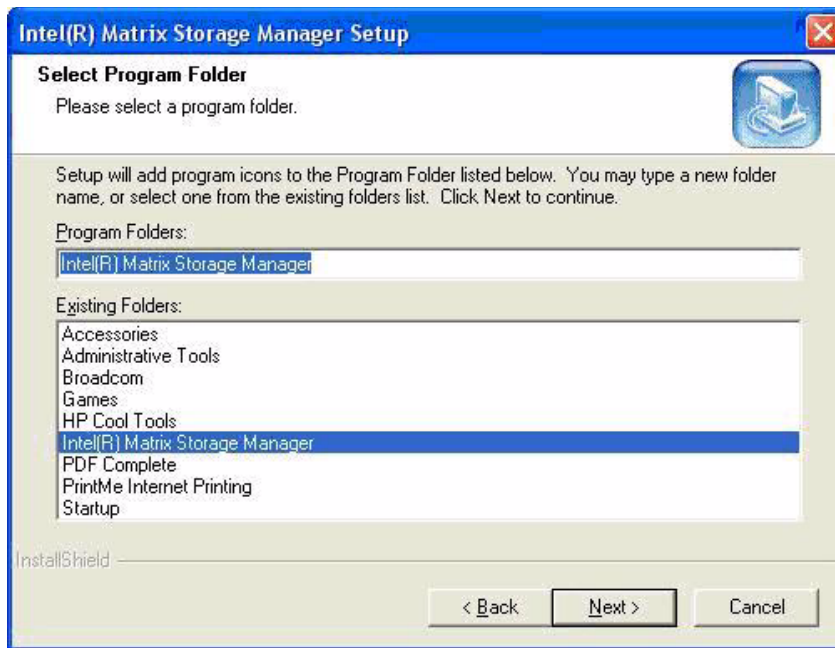


7. Click **Next** to finish the installation.
8. Click **Finish** to close the setup.

Using the Intel Matrix Storage Console interface


1. Click **Start > All Programs > Intel Matrix Storage Manager/Intel Matrix Storage Console** to open the Intel Matrix Storage Console application. The Intel Matrix Storage Console starts in basic mode by default and has three main menus.

NOTE: The report the applications generate is very comprehensive. You can view the report at **View/System Report**. The reports contains information about the driver, operating system, language, and hard drive.

2. Select **View > Hard Drive and RAID Status**.

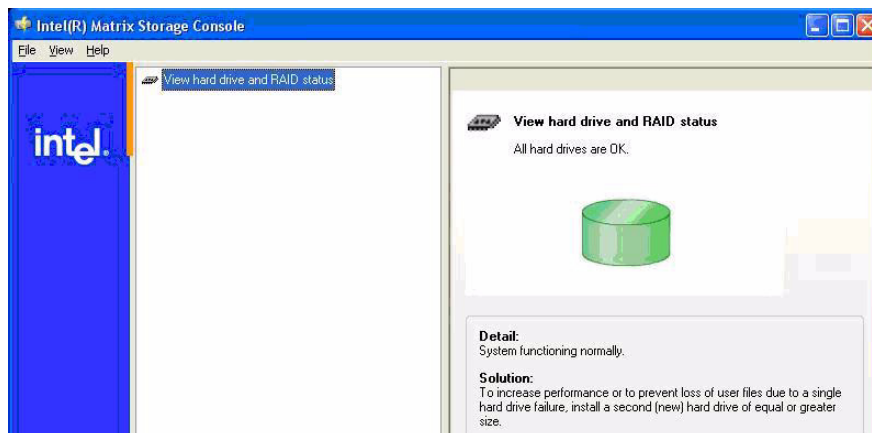

3. For a more detailed view of the RAID controller, click **View > Advanced Mode**.

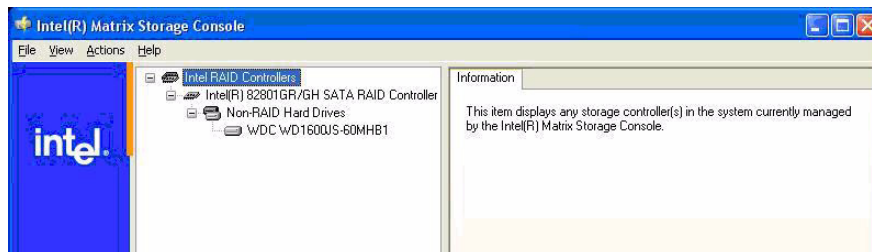


In Advanced Mode, the Intel Matrix Storage Console also includes the **Actions** menu. Use this menu to access the advanced features of the RAID solution.

RAID migrations


Migration to RAID 1 from two non-RAID hard drives using Intel Matrix Storage Console

NOTE: The HP Compaq dc7700 and dx7300 Business PC products only support RAID based on two identical SATA hard drives in either RAID 0 or RAID 1 or Matrix Mode of RAID 0 and RAID 1.

1. Open the Intel Matrix Storage Console and in the left pane select either **Protect data from a hard drive failure with RAID 1** or **Improve storage performance with RAID 0**.

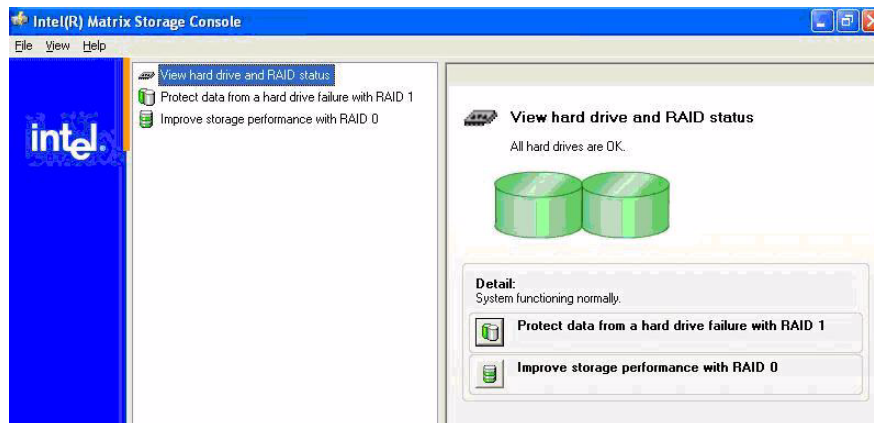

2. In the right pane, select **Protect data from a hard drive failure with RAID 1**.
3. Click **Create a RAID 1 volume** to open a verification window.
4. Select **Yes** to begin the migration process.

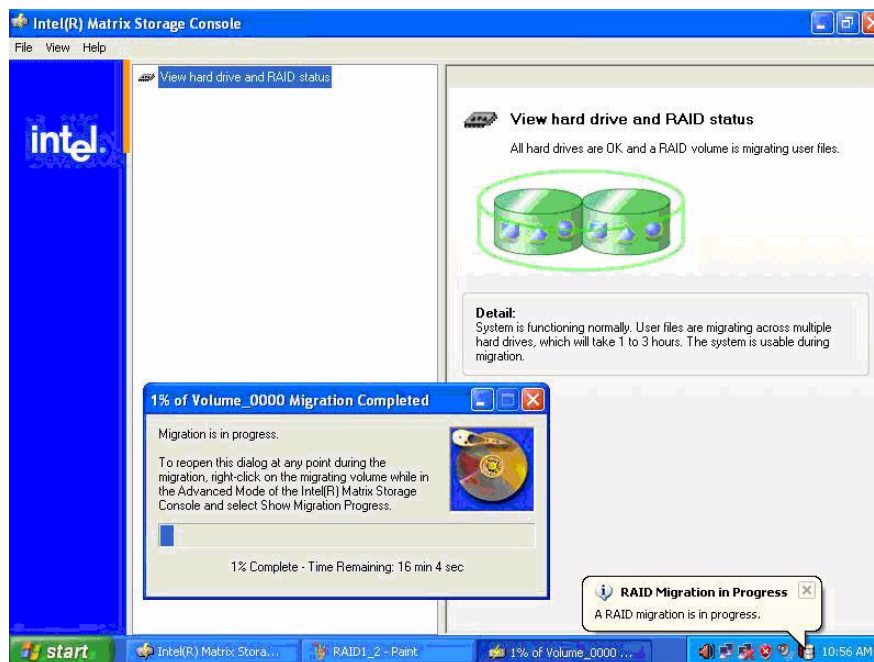


5. Click **OK** after the migration completes.

Degradation

In the unlikely event that one of your hard drives malfunctions, you will be notified with the following message:



1. Run the Intel Matrix Storage Console application on the system experiencing a degradation to identify the hard drive that failed and to which port it is connected.

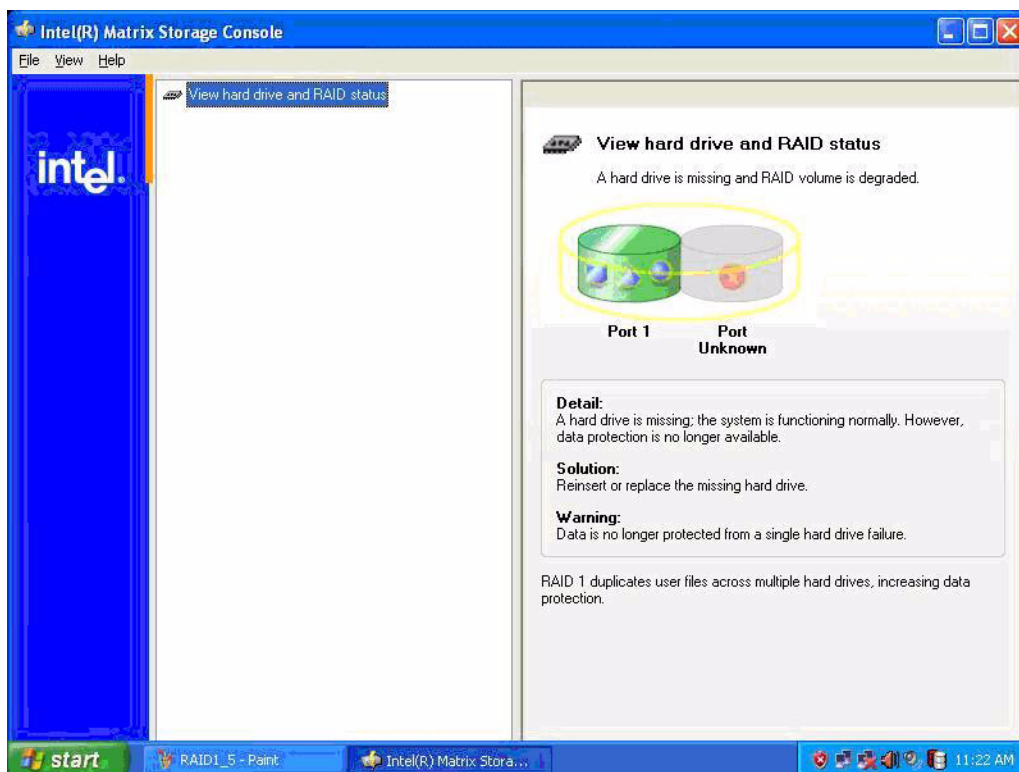

2. After identifying the hard drive, close all applications, shut down the operating system, power down the unit, unplug the power cord, and replace the defective hard drive.


3. After replacing the hard drive, automatic rebuild of the redundancy begins immediately after the system is powered up and operating system starts. The following message appears:



Migration to RAID 0 from two non-RAID hard drives using Intel Matrix Storage Console


NOTE: The HP Compaq dc7700 and dx7300 Business PC products only support RAID based on two identical SATA hard drives in either RAID 0 or RAID 1 or Matrix Mode of RAID 0 and RAID 1.

1. Open the Intel Matrix Storage Console and select **Improve storage performance with RAID 0**.

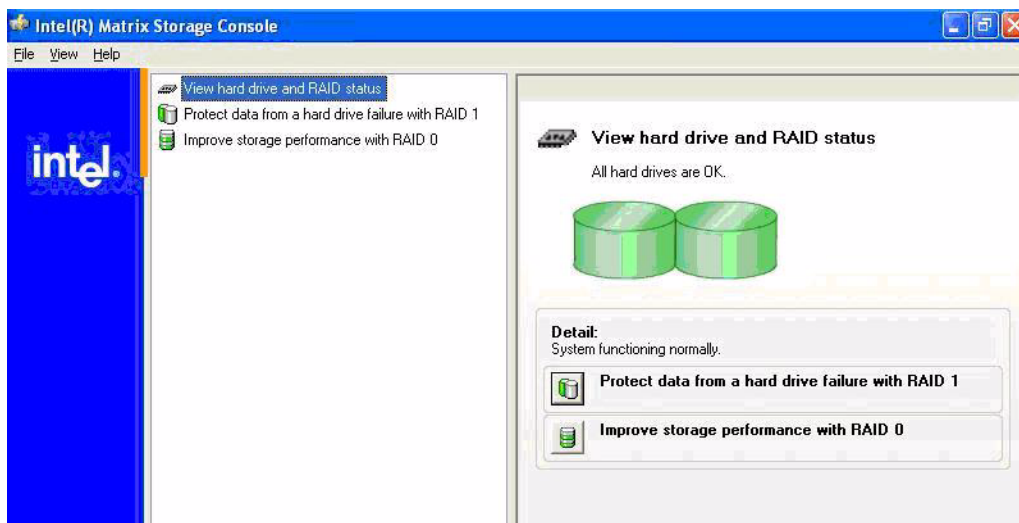

2. Click **Actions > Create a RAID 0 volume** to open a verification window.

3. Click **Yes** to begin the migration process.

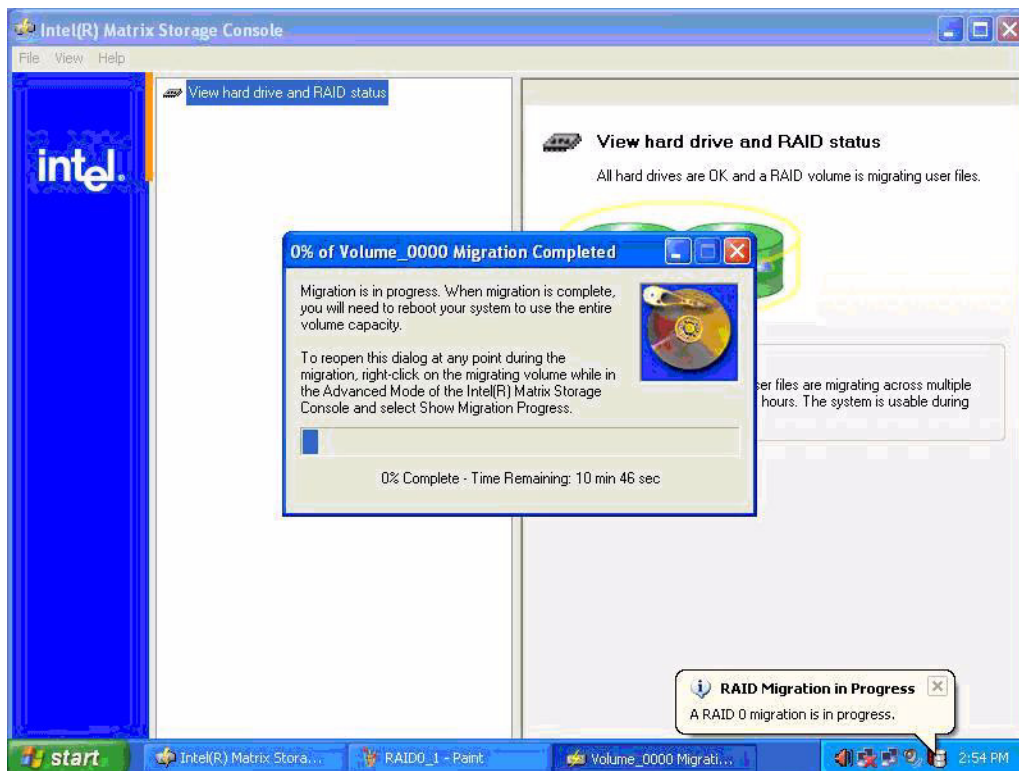


4. Click **OK** after the migration completes.

Migration to RAID 0 from three non-RAID hard drives using Intel Matrix Storage Console

NOTE: Back up all data before proceeding.

NOTE: HP Compaq dc7700 and dx7300 Business PC products support only RAID based on three identical SATA hard drives RAID in either RAID 0 or RAID 5 or Matrix Mode of RAID 0 and RAID 5.

1. Open the Intel Matrix Storage Console and select **Switch to Advanced Mode View**.

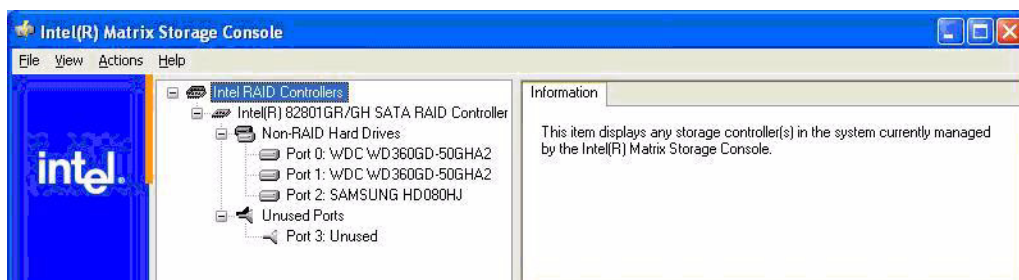

2. Click **Actions > Create RAID Volume from Existing Hard Drive**, which opens a verification window.


3. Click **Next**.

The screenshot shows a Windows-style dialog box titled "Create RAID Volume from Existing Hard Drive Wizard". The "Configure Volume" step is active, with instructions: "You can configure the new RAID volume by entering a name and by selecting the RAID level and strip size below." The "Volume Name" field contains "Volume_0000" and has a note below it: "The name is limited to 16 English alpha-numeric characters." The "RAID Level" dropdown menu is set to "RAID 0". The "Strip Size" dropdown menu is set to "128 KB". At the bottom are three buttons: "< Back", "Next >", and "Cancel".


4. Type the RAID **Volume Name**, select the **RAID Level** (for three hard drive RAID 0 or RAID 5 only), and select the **Strip Size**.

NOTE: HP currently supports only the default Strip Size (in this case 128KB). There is a performance relation between the type of data and the strip sizes.

5. Click **Next** to display the selection of hard drives that will be part of this RAID volume.

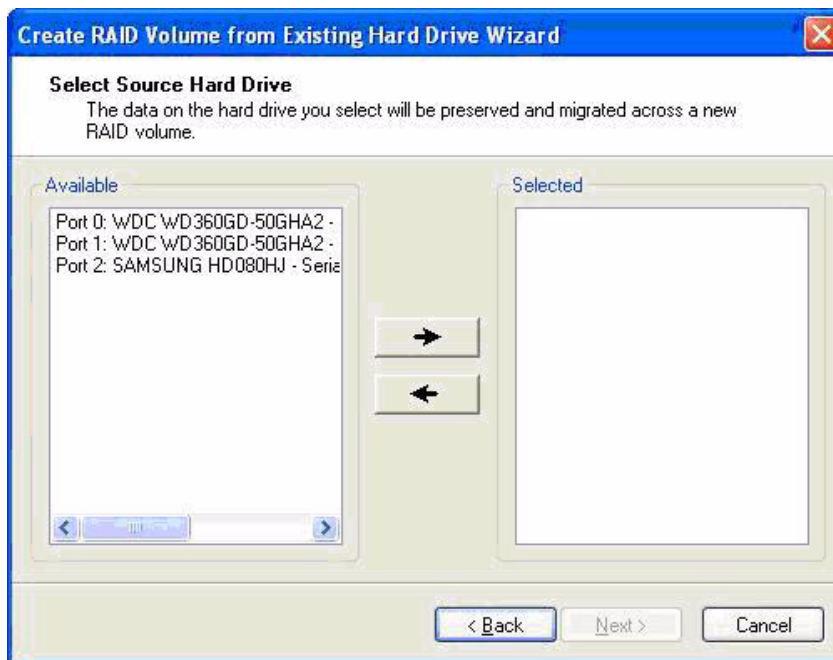

6. Select all three hard drives (Port 0, Port 1, and Port 2), and then click the right arrow to place them in the **Selected** box.
7. Click **Next**.

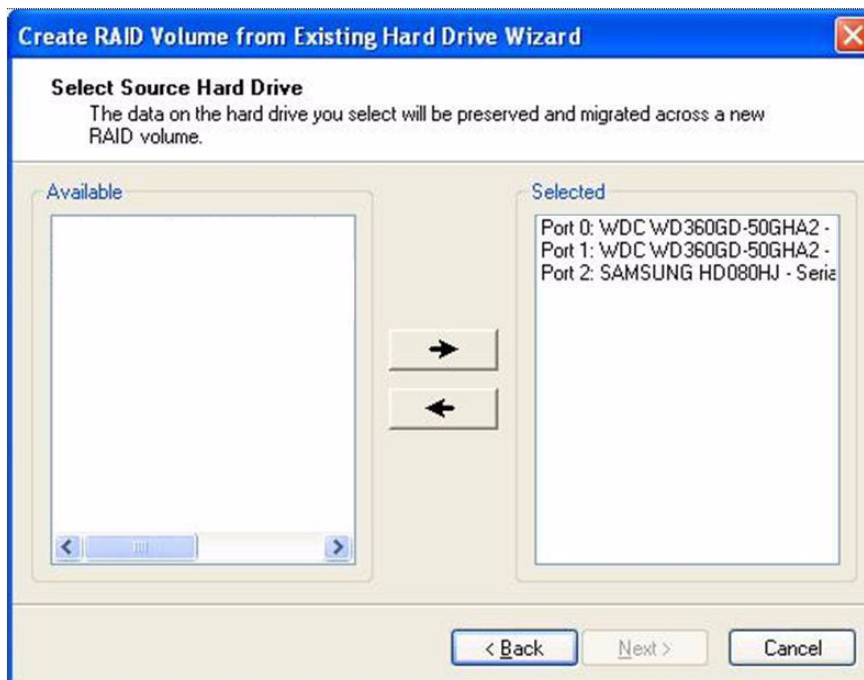

8. Selection all hard drive members of the RAID volume, and then click the right arrow to place all three hard drives in the **Selected** box.
9. Click **Next**.

The screenshot shows a Windows-style wizard window titled "Create RAID Volume from Existing Hard Drive Wizard". The current step is "Specify Volume Size", with instructions: "Use the fields or the slider below to specify the amount of available array space to be used by the new RAID volume." The window displays the following information:

Maximum Volume Size (GB):	103.4
Minimum Volume Size (GB):	34.8
Percentage of Available Space:	<input type="text" value="100"/>
Volume Size (GB):	<input type="text" value="103.4"/>

Below the input fields is a horizontal slider bar with a green handle positioned at the right end. At the bottom of the window are three buttons: "< Back", "Next >", and "Cancel".

The minimum required size for the RAID volume is determined by the size of the source hard drive. If you create a volume that uses less than 100% of the hard drive space, you may create a second RAID volume to use the remaining space.

10. Complete the volume size selection screen, and then click **Next**.


NOTE: If users consume all available storage for this RAID volume, there will be no space to create another RAID volume for this hard drive, thereby not allowing for Matrix mode RAID.

Note the size if you want to create a second RAID volume in this set of hard drives.

11. To create one RAID 0 out of the hard drive, leave the default of 100% for **Percentage of Available Space**, and then click **Next**.

12. Select **Finish** to start the migration process, which can take a few hours.

After you click **Finish**, the migration starts and the following screen displays:

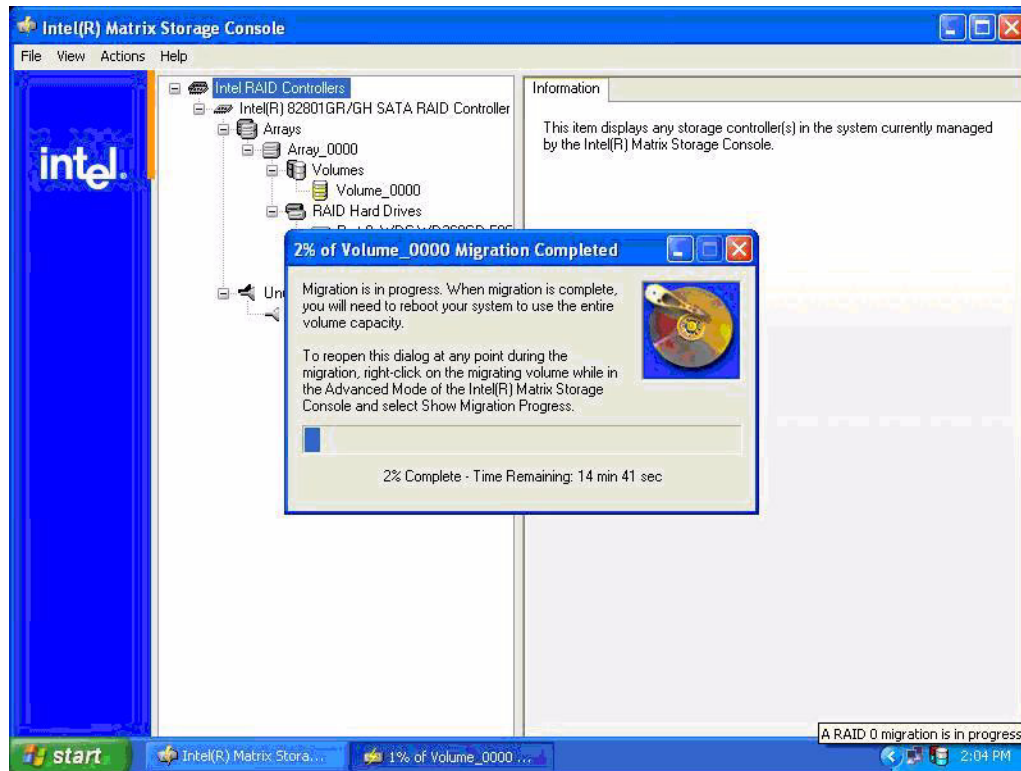


13. Reboot the system after the migration finishes.

Migration to RAID 5 from three non-RAID hard drives using Intel Matrix Storage Console

NOTE: Back up all data before proceeding.

NOTE: HP Compaq dc7700 and dx7300 Business PC products support only RAID based on three identical SATA hard drives in either RAID 5 or RAID 0 or Matrix Mode of RAID 0 and RAID 5.

1. Open the Intel Matrix Storage Console and select **Switch to Advanced Mode View**.

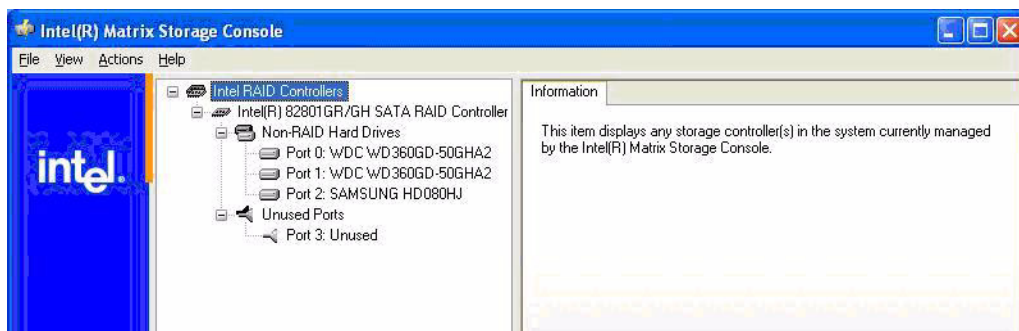

2. Click **Actions/Create RAID Volume from Existing Hard Drive** to open a verification window.
3. Click **Next**.

Create RAID Volume from Existing Hard Drive Wizard

Configure Volume
You can configure the new RAID volume by entering a name and by selecting the RAID level and strip size below.

Volume Name
Volume_0000
The name is limited to 16 English alpha-numeric characters.

RAID Level
RAID 5


Strip Size
64 KB

< Back Next > Cancel


4. Type the RAID **Volume Name**, select the **RAID Level** (for three hard drive RAID 0 or RAID 5 only), and select the **Strip Size**.

NOTE: HP currently supports only the default Strip Size (in this case 64KB).

5. Click **Next** to see the selection of hard drives that will be part of this RAID volume.

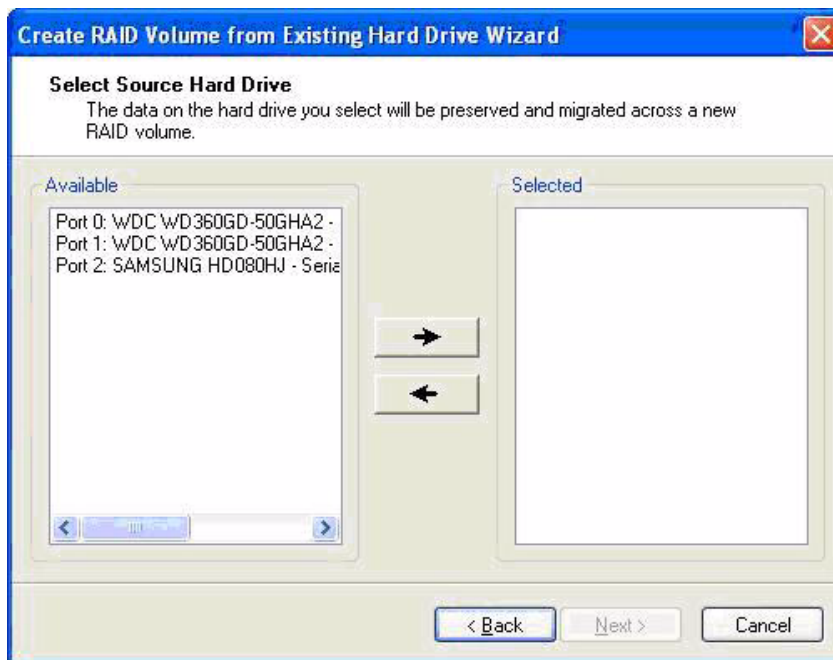

6. Select all three hard drives (Port 0, Port , 1 and Port 2), and then click on the arrow to move them to the **Selected** window.
7. Click **Next**.

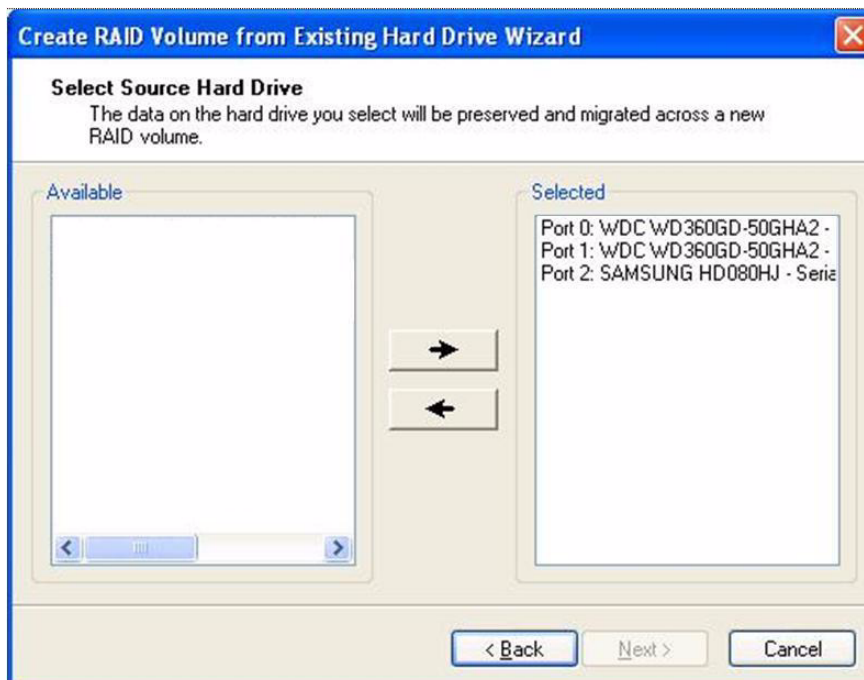

8. After the selection of the all hard drive members of the RAID volume, complete the volume size selection screen, and then click **Next**.

NOTE: If users consume all available storage for this RAID volume, there will be no space to create another RAID volume for this hard drive, thereby not allowing for Matrix mode RAID.


The screenshot shows a Windows-style dialog box titled "Create RAID Volume from Existing Hard Drive Wizard". The current step is "Specify Volume Size", with instructions: "Use the fields or the slider below to specify the amount of available array space to be used by the new RAID volume." The dialog contains the following fields and controls:

- Maximum Volume Size (GB): 68.9
- Minimum Volume Size (GB): 34.8
- Percentage of Available Space: A text box containing "100".
- Volume Size (GB): A text box containing "68.9".
- A horizontal slider bar below the text boxes, with a green handle positioned at the right end.
- A paragraph of text: "The minimum required size for the RAID volume is determined by the size of the source hard drive. If you create a volume that uses less than 100% of the hard drive space, you may create a second RAID volume to use the remaining space."
- At the bottom, three buttons: "< Back", "Next >", and "Cancel".

Note the size if you want to create a second RAID volume in this set of hard drives.

9. To create one RAID 5 out of the hard drive, leave the default of 100% for **Percentage of Available Space**, and then click **Next**.

10. Select **Finish** to start the migration process, which can take a few hours. The following screen displays.

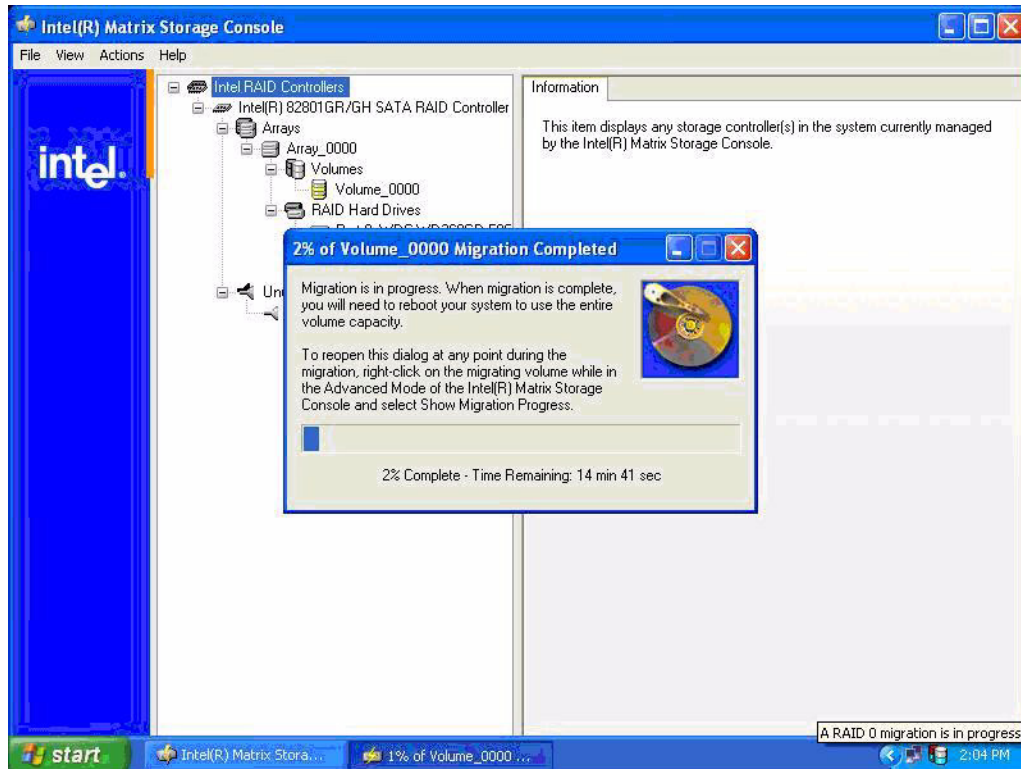


11. Reboot the system after the migration finishes.

Migration to Matrix RAID 5 and RAID 0 from three non-RAID hard drives using Intel Matrix Storage Console


NOTE: Back up all data before proceeding.

NOTE: HP Compaq dc7700 and dx7300 Business PC products support only RAID based on three identical SATA hard drives in either RAID 5 or RAID 0 or Matrix Mode of RAID 0 and RAID 5.

1. Open the Intel Matrix Storage Console and select **Switch to Advanced Mode View**.

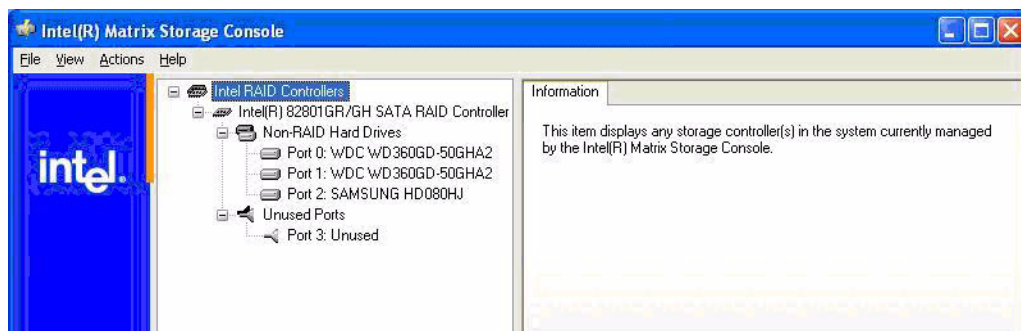

2. Click **Actions/Create RAID Volume from Existing Hard Drive** to open a verification window.
3. Click **Next**.

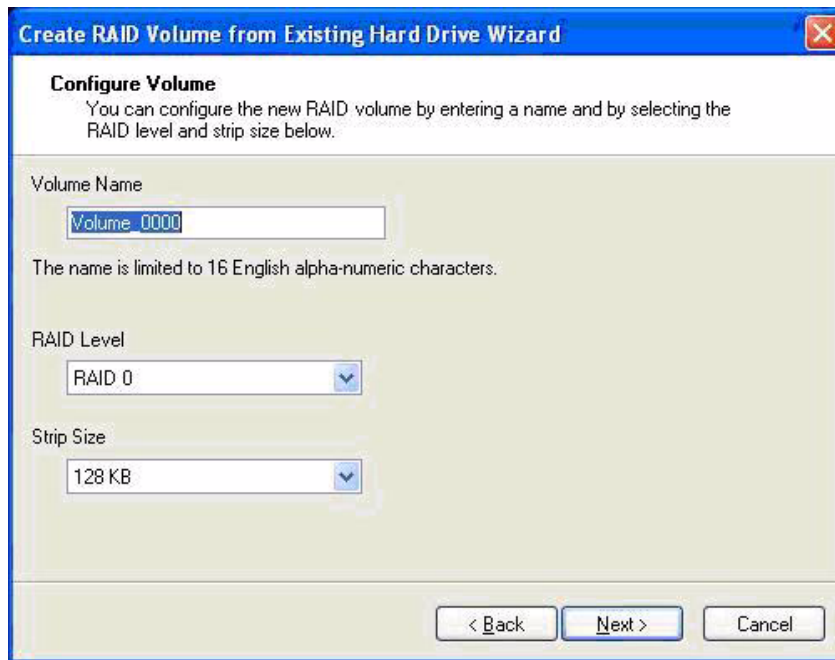


The screenshot shows a Windows-style wizard window titled "Create RAID Volume from Existing Hard Drive Wizard". The current step is "Configure Volume", with a sub-instruction: "You can configure the new RAID volume by entering a name and by selecting the RAID level and strip size below." The window contains three input fields: "Volume Name" with the text "Volume_0000" and a note "The name is limited to 16 English alpha-numeric characters."; "RAID Level" with a dropdown menu set to "RAID 0"; and "Strip Size" with a dropdown menu set to "128 KB". At the bottom right are three buttons: "< Back", "Next >", and "Cancel".


4. Type the RAID **Volume Name**, select the **RAID Level** (for three hard drive RAID 0 or RAID 5 only), and select the **Strip Size**.

NOTE: HP currently supports only the default Strip Size (in this case 128KB).

5. Click **Next** to see the selection of hard drives that will be part of this RAID volume.

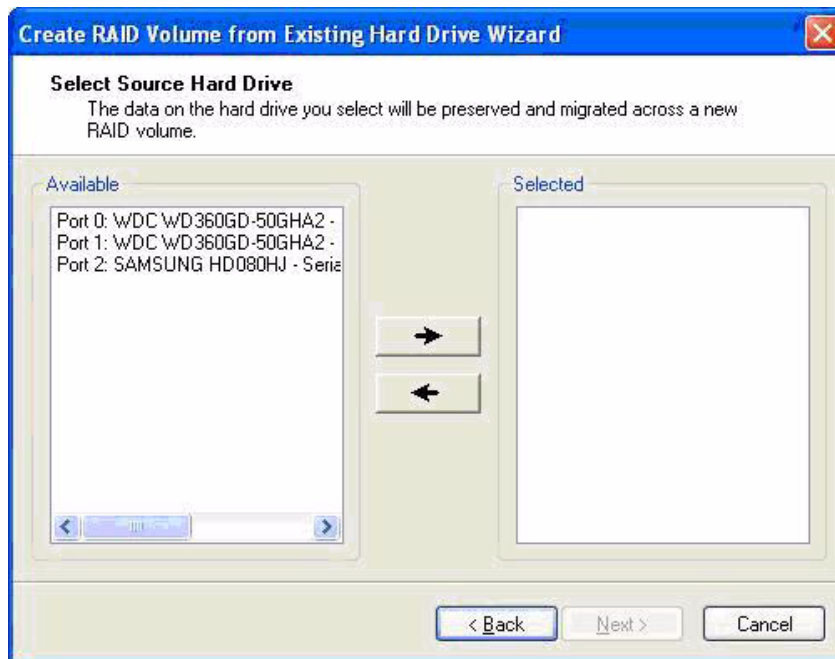

6. Select all three hard drives (Port 0, Port 1 and Port 2), and then click on the arrow to move them to the **Selected** window.
7. Click **Next**.

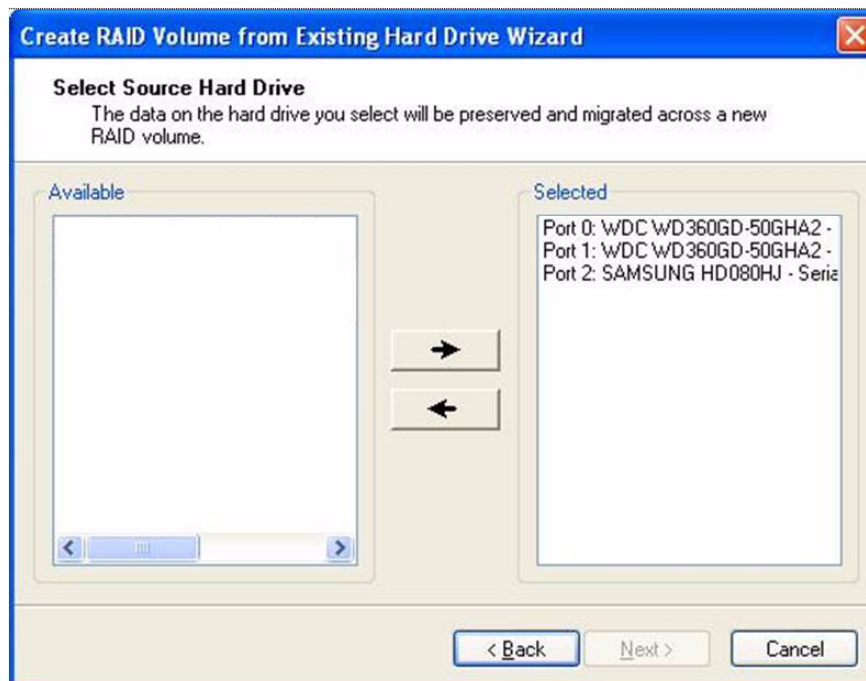

8. After the selection of the all hard drive members of the RAID volume, complete the volume size selection screen, and then click **Next**.

NOTE: If users consume all available storage for this RAID volume, there will be no space to create another RAID volume for this hard drive, thereby not allowing for Matrix mode RAID.


The screenshot shows a Windows-style dialog box titled "Create RAID Volume from Existing Hard Drive Wizard". The current step is "Specify Volume Size", with instructions: "Use the fields or the slider below to specify the amount of available array space to be used by the new RAID volume." The dialog contains the following fields and controls:

- "Maximum Volume Size (GB):" with a value of 103.4.
- "Minimum Volume Size (GB):" with a value of 34.8.
- "Percentage of Available Space:" with a text input field containing "100".
- "Volume Size (GB):" with a text input field containing "103.4".
- A horizontal slider bar below the input fields, with a green handle positioned at the right end.
- A paragraph of text: "The minimum required size for the RAID volume is determined by the size of the source hard drive. If you create a volume that uses less than 100% of the hard drive space, you may create a second RAID volume to use the remaining space."
- At the bottom, three buttons: "< Back", "Next >", and "Cancel".

Note the size if you want to create a second RAID volume in this set of hard drives.

9. To create two volumes based on your space, reliability and performance needs, select the size of the first RAID volume by sliding the bar or entering the desired volume size. For example, divide in half the available hard drive storage in two RAID volumes by setting the **Percentage of Available Space** to 50%, so that 50% of drive capacity is used for RAID 0.
10. Click **Next**.

11. Click **Finish** to start the migration process, which can take a few hours.

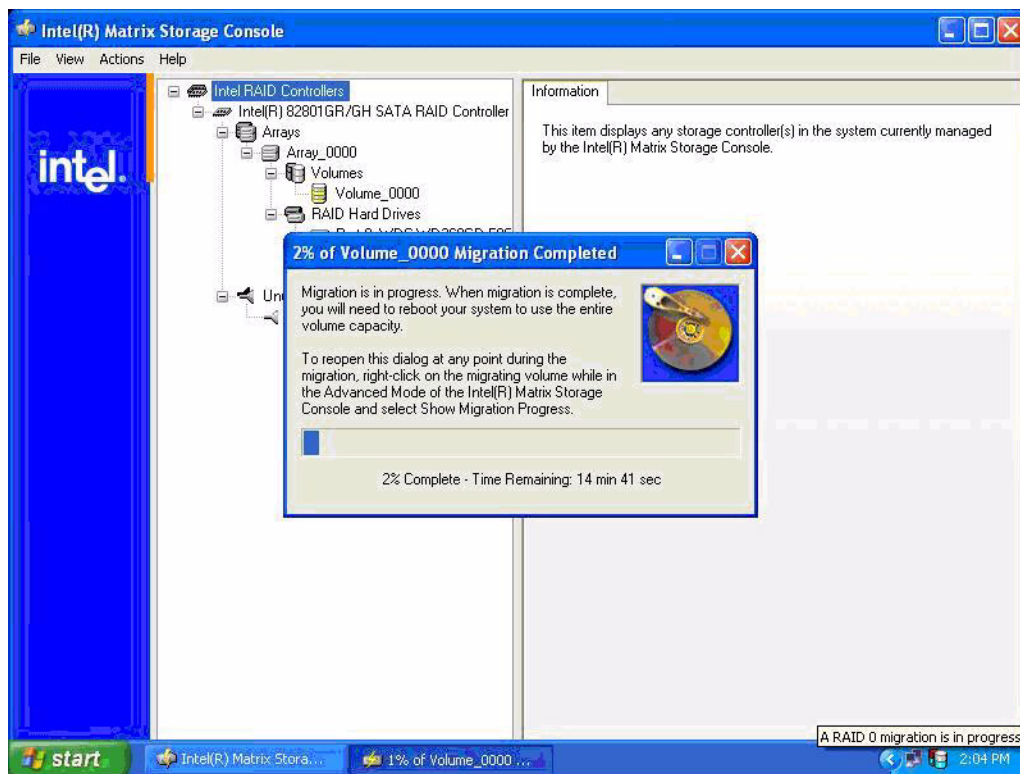


12. Reboot the system after the migration finishes.

NOTE: Back up all data before proceeding.

13. After the first RAID volume has been created, create the second RAID volume by opening the Intel Matrix Storage Console, clicking **Switch to Advanced Mode View**, and then clicking **Actions/ Create RAID Volume from Existing Hard Drive**.

14. Click **Next**.

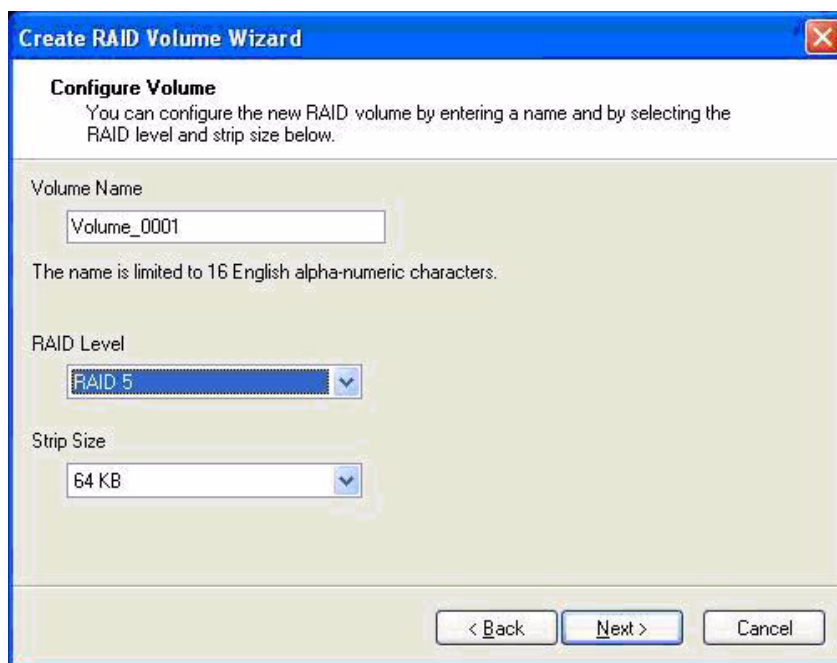


The screenshot shows the 'Configure Volume' step of the 'Create RAID Volume Wizard'. The window title is 'Create RAID Volume Wizard'. The main heading is 'Configure Volume'. Below it, a message states: 'You can configure the new RAID volume by entering a name and by selecting the RAID level and strip size below.' There are three input fields: 'Volume Name' with the text 'Volume_0001', 'RAID Level' with a dropdown menu showing 'RAID 5', and 'Strip Size' with a dropdown menu showing '64 KB'. A note below the Volume Name field says 'The name is limited to 16 English alpha-numeric characters.' At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.

15. Use the same values you entered in the previous RAID volume confirmation and type the RAID **Volume Name**, select the **RAID Level** (for three hard drive RAID 0 or RAID 5 only), and select the **Strip Size**.

NOTE: HP currently supports only the default Strip Size (in this case 64KB).

16. Click **Next** to see the selection of hard drives that will be part of this RAID volume.

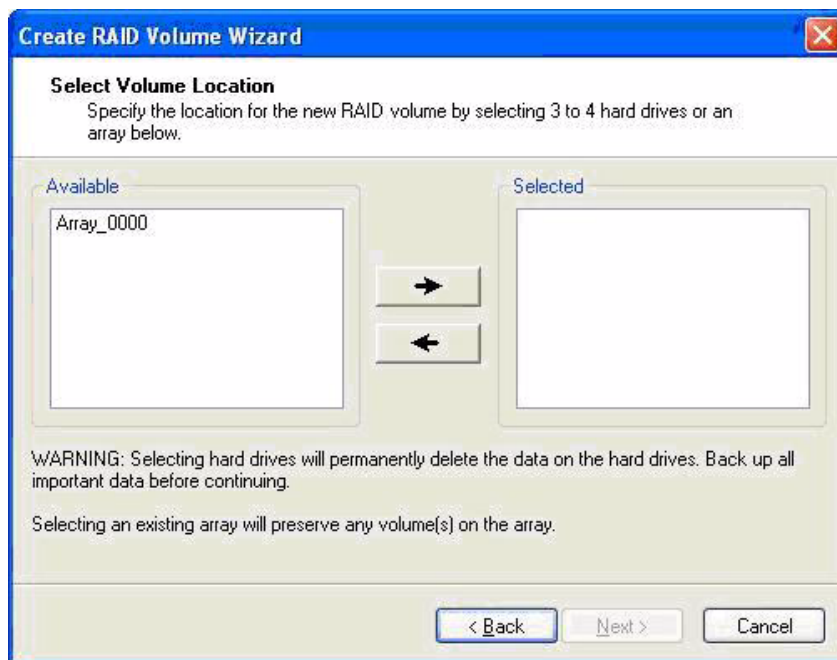

The screenshot shows the 'Select Volume Location' step of the 'Create RAID Volume Wizard'. The window title is 'Create RAID Volume Wizard'. The main heading is 'Select Volume Location'. Below it, a message states: 'Specify the location for the new RAID volume by selecting 3 to 4 hard drives or an array below.' There are two list boxes: 'Available' on the left containing 'Array_0000' and 'Selected' on the right, which is currently empty. Between the two list boxes are two buttons with right-pointing and left-pointing arrows. At the bottom, there is a warning message: 'WARNING: Selecting hard drives will permanently delete the data on the hard drives. Back up all important data before continuing.' Below the warning, it says: 'Selecting an existing array will preserve any volume(s) on the array.' At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.

17. Because this is the second volume for this set of hard drives, select the existing name in the **Available** box (Array 0000), and then click the right arrow to move this array into the **Selected** box.
18. Click **Next**.




The Specify Volume Size screen is grayed out because the second volume of this matrix mode takes the remaining space. After the selection of the all hard drive members of this RAID volume, follow the volume size selection screen.


NOTE: The first array volume creation is the place for adjusting the size; the second volume will take any remaining space.

19. While creating the second RAID volume, click **Next** to open the completion window.


20. Select **Finish** to start the migration process, which can take a few hours. The following screen appears.

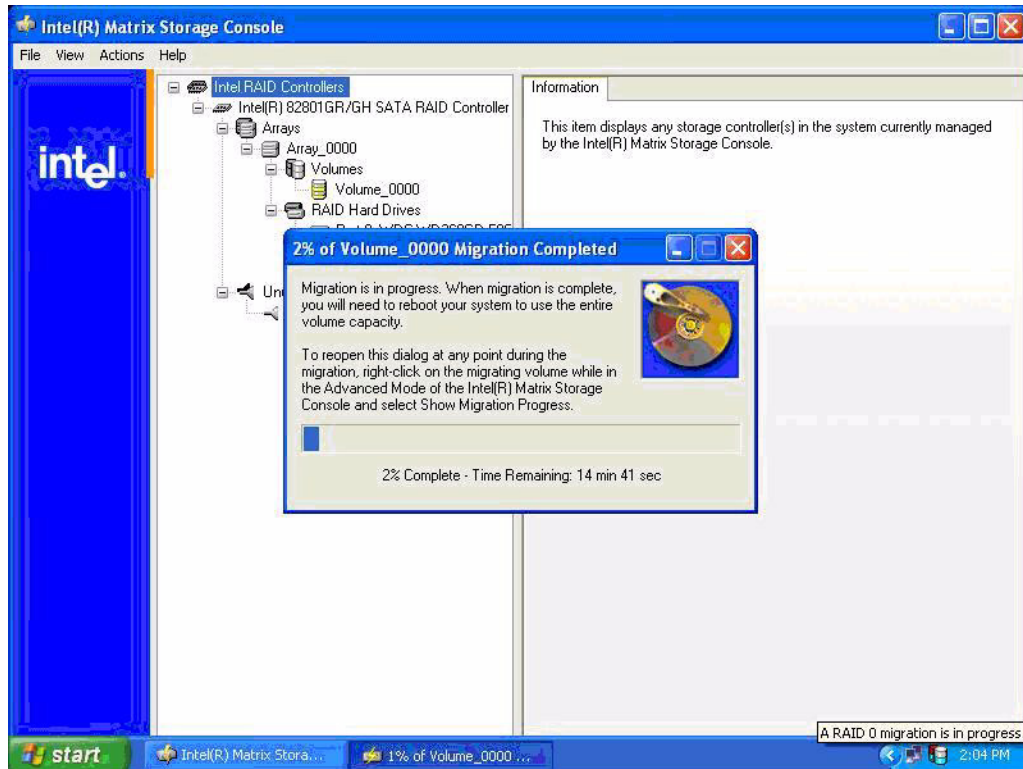

21. Reboot the system after the migration finishes.

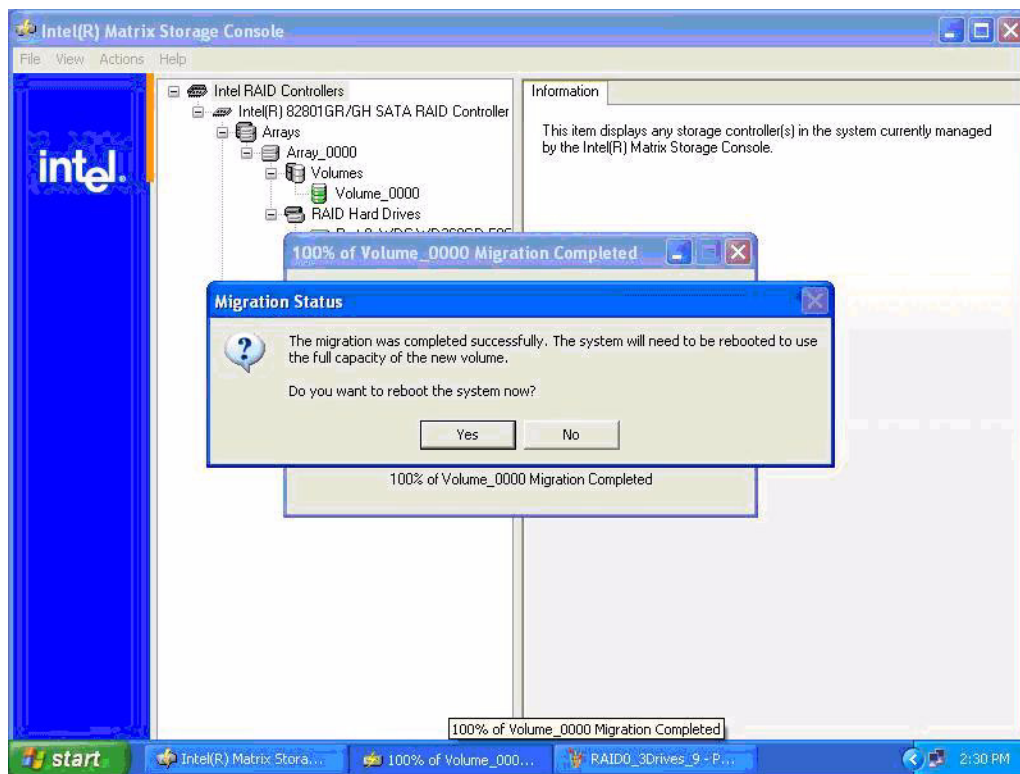

After the second reboot and both migrations are complete, you can see the state of the Matrix mode created by opening the Intel Matrix Storage Console and clicking **Switch to Advanced Mode View**. The matrix mode of three hard drives is illustrated in the following image.

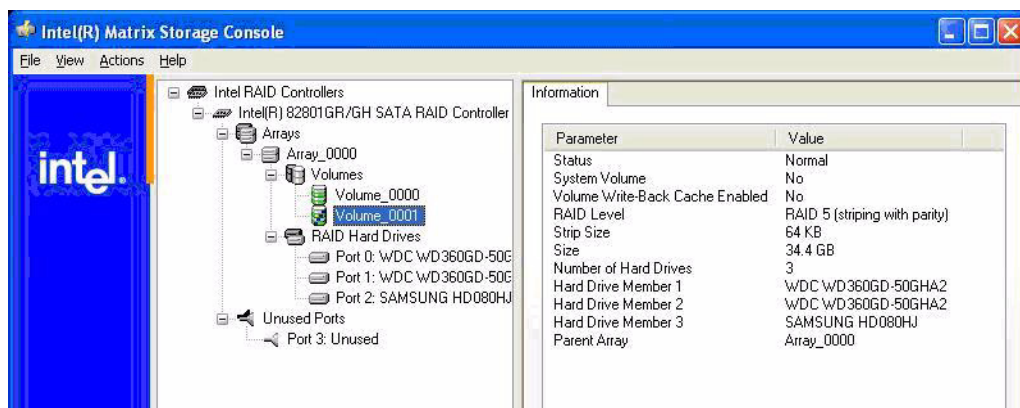

Migration to RAID Matrix Mode (0 + 1) from two non-RAID hard drives using Matrix Storage Console

The migration process for two hard drives to RAID Matrix Mode (0 + 1) is a very similar to the process described in the section about migration of three hard drives to matrix mode RAID (0 + 5). The difference in the process is selecting two hard drives as part of the volume created and selecting RAID 5 instead of RAID 1.

Installation

HP desktops come with RAID software preinstalled; however, if reinstallation is necessary, use setup in combination of with the following supported flags:

- ?**: The installer presents a dialog showing all the supported setup flags (shown here) and their usage.
- A**: Extracts all files (does not install driver) to <path> if **-P** is also supplied. Otherwise, the files are extracted to the default location.
- B**: Forces a system reboot after installation.
- O<name>**: Allows for the customization of the program folder name for the Intel(R) Matrix Storage Console, which appears in **Start > All Programs**.
- P<path>**: Supplies target path when using **-A** flag.
- N**: Installs all components except driver.
- NoGUI**: Installs only the driver. The Intel(R) Matrix Storage Console, Event Monitor, and Tray icon applet are not installed.
- NoMon**: Disables the Event Monitor which consists of the Disk Monitor Service and the System Tray Icon Applet.
- S**: Silent install (no user prompts).
- BUILD**: Displays build information.
- G<number>**: Forces a particular language install. There cannot be a space between **-G** and <number>.
- f2<path\name>**: Creates a log file in <existing path> with <name>. Use during silent installation. There cannot be a space between **-F2** and <path\name>, and the path must exist prior to installation.

Notes: Flags and their parameters are not case-sensitive. Flags may be supplied in any order, with the exception of **-S** and **-G**, which must be supplied last. When using the **-A** flag, a target path may be specified using the **-P** flag, and the **-O**, **-G**, **-S**, and **-N** flags are ignored. When using the **-P**, **-O**, **-G** and **-F2**, flags there should be no space between the flag and the argument. When using the **-F2** flag, specify a log file name and path. The path must exist prior to the installation.

Language support table

ara	Arabic (Saudi Arabia)	(0401)
chs	Chinese (Simplified)	(0804)
cht	Chinese (Traditional)	(0404)
csy	Czech	(0005)
dan	Danish	(0006)
nld	Dutch	(0013)
enu	English (United States)	(0009)
fin	Finnish	(000B)
fra	French (International)	(040C)
deu	German	(0007)
ell	Greek	(0008)
heb	Hebrew	(040D)
hun	Hungarian	(000E)
ita	Italian	(0010)
jpn	Japanese	(0011)
kor	Korean	(0012)
nor	Norwegian	(0014)
plk	Polish	(0015)
ptb	Portuguese (Brazil)	(0416)
ptg	Portuguese (Standard)	(0816)
rus	Russian	(0019)
esp	Spanish	(000A)
sve	Swedish	(001D)
tha	Thai	(001E)
trk	Turkish	(001F)

© 2006 Hewlett-Packard Development Company, L.P. The information in this document is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft, MS-DOS, Windows, and Windows NT are trademarks of Microsoft Corporation in the U.S. and other countries.
434477-001, 9/2006

